

Body/Exterior Inspection/Service

- ❑ Inspect the roof's condition and the security of the ladder to the motorhome. Check sealant integrity around vents, the TV antenna, the satellite dish and all other accessories.
- ❑ Check sealant/caulking integrity at all seams on the motorhome's exterior. Look for cracks or tears that can lead to water intrusion. Closely inspect the caulking around window frames, clearance- and taillights, and around compartment doors and other accessories.
- ❑ Make sure the compartment doors securely latch.
- ❑ Inspect the condition of the hardware for the awnings and windows; clean and lubricate as needed. Also check the tension on any slide toppers, and verify the fabrics and materials are in good condition.
- ❑ Extend all awnings and ensure the fabrics and materials are in good condition; clean if necessary.
- ❑ Lubricate entry and baggage door locks with the appropriate solutions, and also lubricate the entry-door step using dry lube.
- ❑ Ensure the entry-door step is working properly, including the engine-switch on/off feature; clean the entry-door step.
- ❑ Clean and treat EPDM or TPO roof materials with protectant. This is a good time to check on the integrity of the roof vent lids/covers, and to clean them, if necessary. While you're on the roof, make sure the antennas are in good condition and working properly.
- ❑ Wash and wax the exterior with the appropriate materials for the surfaces involved.

From the experts at:

MotorHome

Travel, Tech, Lifestyle – For the RV Enthusiast