

Dinghy Towing

- Inspect the tow bar for wear and/or missing parts.
- Inspect the dinghy power-cable plug and receptacle.
- Hook-up the dinghy and check tail- and clearance lights.
- Install/set-up the dinghy braking system to confirm operation.

From the experts at:

MotorHome

Travel, Tech, Lifestyle – For the RV Enthusiast